## Wirelessin IR Remote Extender

## Transmitter

1. Transmission frequency: 433.92MHz ±500kHz Superherodyne

2. Carrier frequency: 38KHz/56KHz

3.IR signal Transmitting: <10m

4. Power Input: 5V==100mA, or two batteries of AA LR6 1.5V

## Receiver

1. Transmission frequency: 433.92MHz ±200kHz Superherodyne

2. Carrier frequency: 38KHz/56KHz (manual switch)

3.IR signal Receiving: ≤5m

4. Power Input: 5V == 100mA, or two batteries of AA LR6 1.5V

5. Horizontal barrier-free transmission distance between the

Transmitter and Receiver: ≤200m

## Standard accessories


1.USB cable 2pcs

2.User Manual 1pcs


3.IR Extender Wire 1 pcs

4. Transmitter 1 set

5.Receiver 1set

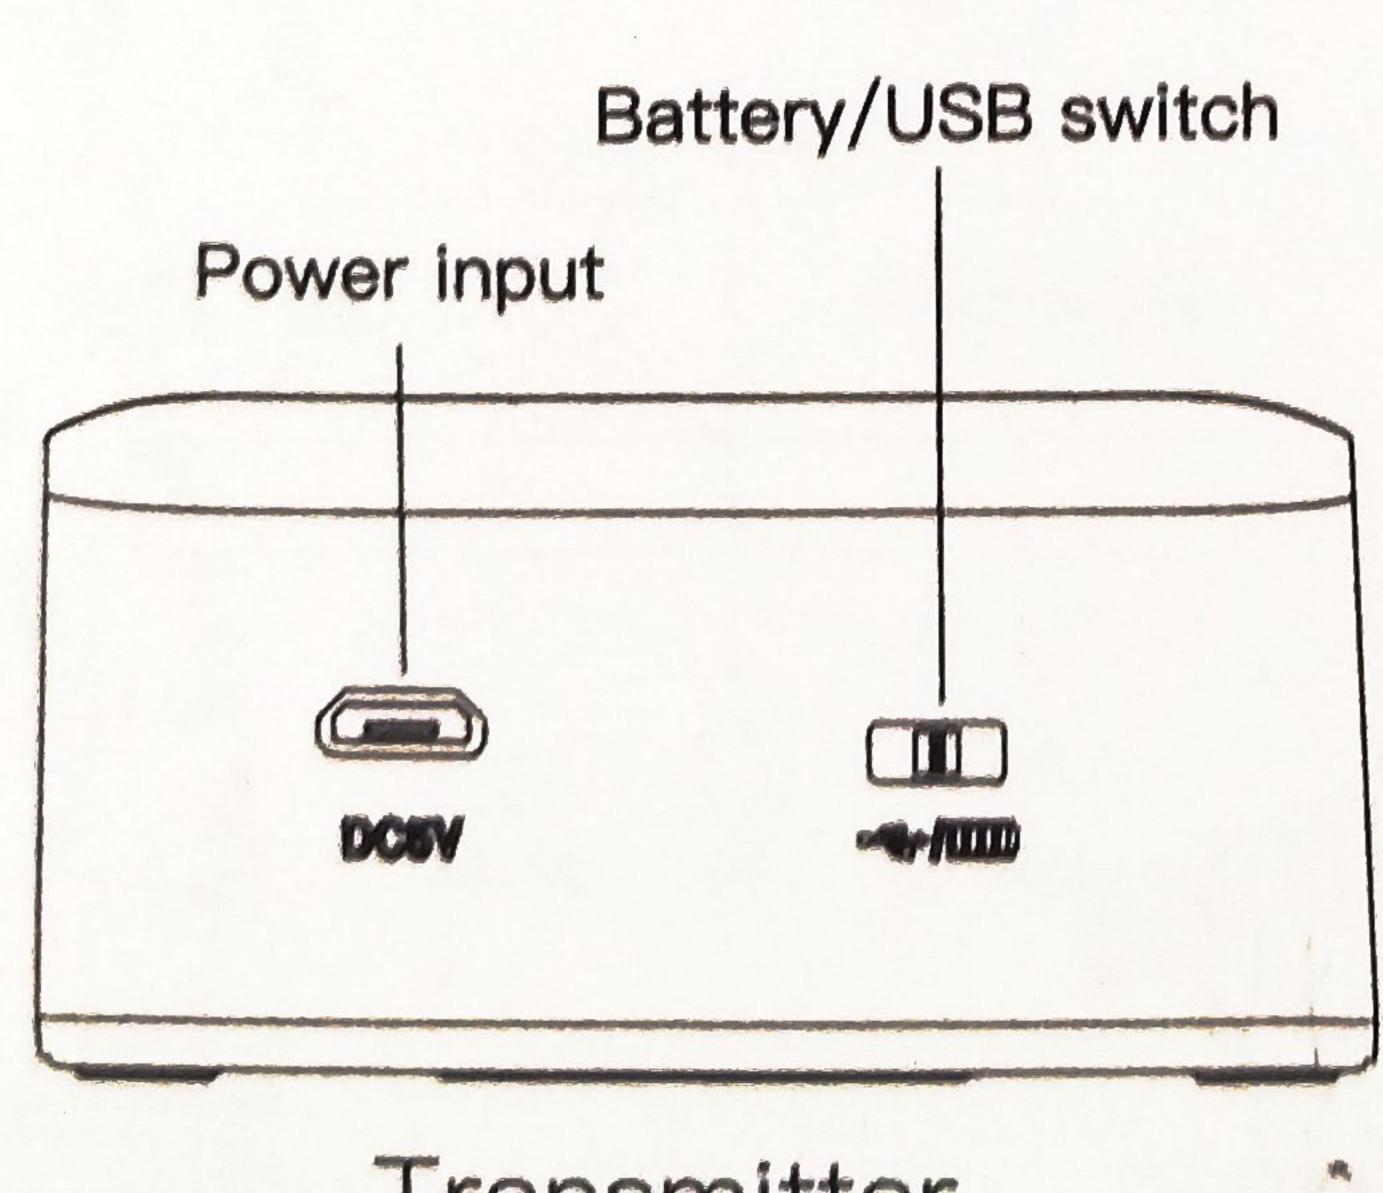

Transmitter

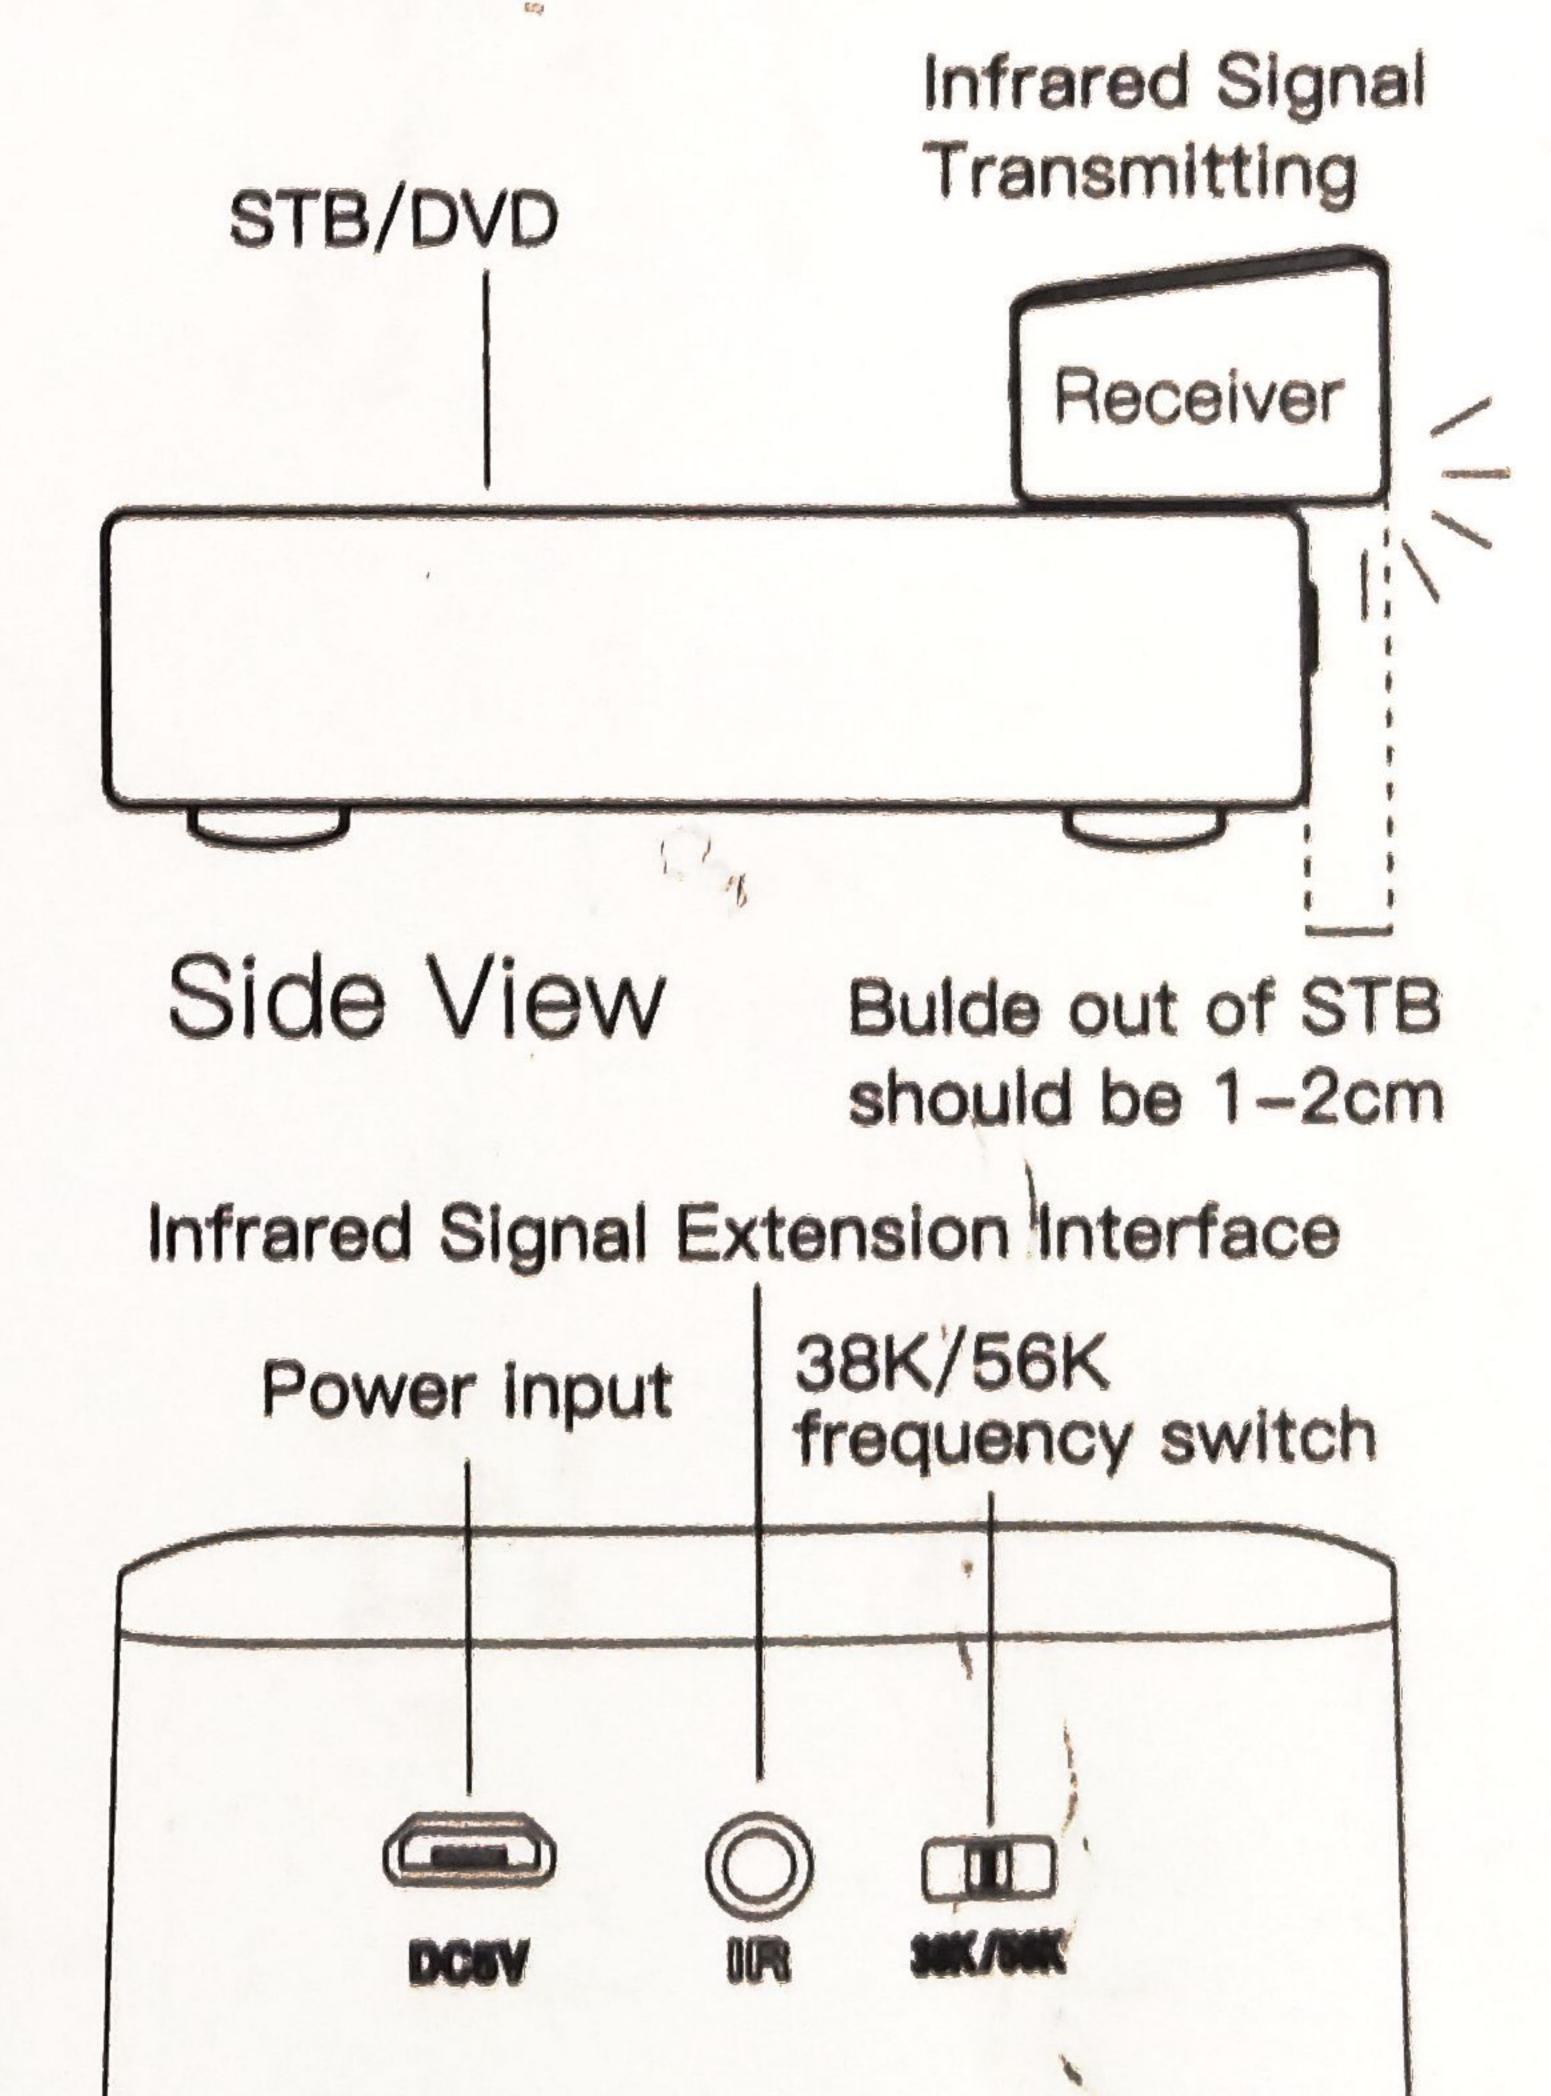

Receiver